


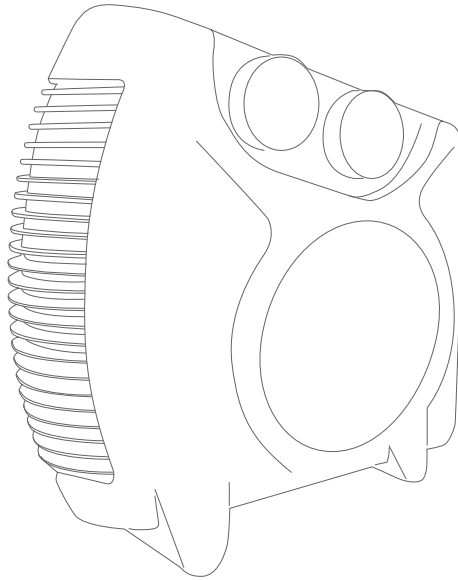

INSTRUCTION MANUAL

2KW FAN HEATER



Tel: 01244 631370 | Email: sales@dexproltd.com

Introduction

Models covered by this instruction sheet:- DXFH2 2KW FAN Heater.



IMPORTANT Read these instructions fully before using the appliance.
Retain these instructions for future reference.

NOTE The appliance may only be used in a fixed position and only for the purpose described. It is not for outdoor use!

SAFETY INSTRUCTIONS

Please read these instructions before operating the appliance.

This product must be installed by a competent person or a qualified electrician in accordance with the current building and IEE wiring regulations.

As the installer or user of this product it is your own responsibility to ensure that this fitting is fit for the purpose for which you have intended it. We cannot accept any liability for loss, damage or premature failure resulting from inappropriate use. This product is intended for normal day service.



This product becomes Hot! In certain areas and can cause burns if touched.

Switch off the mains power before commencing installation / maintenance and remove the appropriate circuit fuse or lock off MCB

Suitable for indoor use only.

This product is only suitable for use in living and public areas. Do NOT use this appliance in bathrooms or where similar conditions of excessive moisture are present

Suitable for fixing on a normal flammable surface.

Ensure that the fixings will be anchored in a solid surface only, e.g. concrete, brick or a wooden joist

It is not suitable for use on highly flammable surfaces.

If the appliance has not been used for long period of time/ freezing conditions, run at cold/fan setting for a few minutes before using heat settings.

If the appliance is mounted in a toilet or washroom an isolating switch must be provided outside the washroom adjacent to the entrance door.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

WARNING

To avoid overheating, do not cover the heater or use this heater in areas where excessive dust exists. Use this heater on a horizontal and stable surface, or fix it to the wall, as applicable.

DO NOT COVER OR OBSTRUCT the air inlet or outlet grille

This heater must not be located immediately above or below a fixed socket outlet or connection box.

This product is designed for permanent connection to fixed wiring via a fused spur (with a 13 Amp fuse). We recommend that the supply incorporates a switch for ease of operation.

Make connections to the electrical supply in accordance with the following code:

Live Brown or Red

Neutral Blue or Black

Earth Green and Yellow

This product must be connected to Earth.

Safety trips

The screen heater, is fitted with a bi-metal trip, this is a safety device which switches the heater off the heater if for any reason the appliance overheats, will automatically resets once heater has cooled down.

Ensure the appliance is functioning correctly, if heater trips again the appliance should be checked by a competent electrician.

The heater is also fitted with one shot thermal fuse. In the event of heater continuing to overheat the fuse will blow and cannot be used again.

Specification


Voltage: 230V/240v~50/60Hz

Maximum power output: 2000W

Switch positions: Two heat power settings 1000/2000W

Installation

1. Turn the thermostat switch to the minimal value and turn the heat select switch to the "O" position (see picture).
2. Plug in the appliance and turn the thermostat switch to the maximum position. Then turn the heat select switch to choose air or warm air and the temperature of warm air as below. While working the indicator light will be on.
 - 2.1 Turn the heat select switch to "❄️" position, the heater blows cool air.
 - 2.2 Turn the heat select switch to "I" position, the heater blows warm air, working at 1000W.
 - 2.3 Turn the heat select switch to "II" position, the heater blows warm air, working at 2000W.
 - 2.4 Turn the heat select switch to "O" position, the heater stops working, the indicator light will be off.
3. Adjust the thermostat switch to suitable position for desired temperature setting.
 - 3.1 Check if the thermostat switch is on the maximum position.
 - 3.2 When you feel the room temperature comfortable, turn the thermostat switch anti-clockwise slowly to the minimal position until the appliance stops working.
 - 3.3 Then the thermostat switch will keep the room temperature at the desired temperature automatically.
 - 3.4 You can also turn the thermostat switch anti-clockwise to the minimum position or turn the thermostat switch clockwise to maximum position to make the temperature lower or higher.

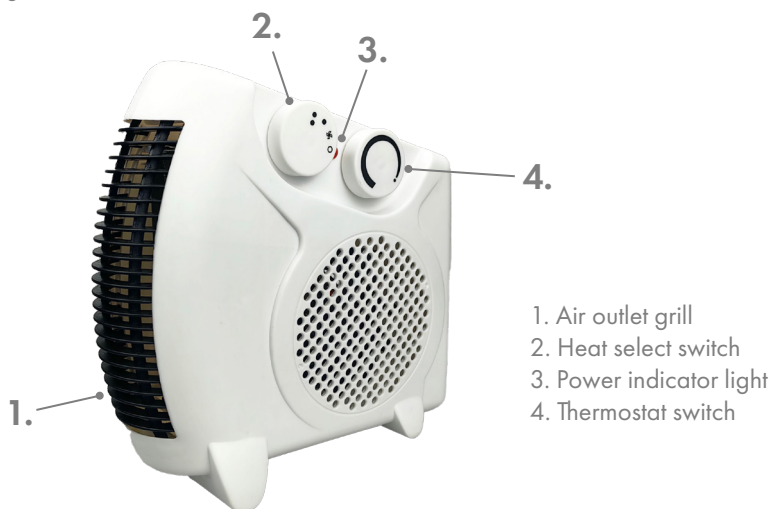

Cleaning

1. Before cleaning, please make sure to disconnect the plug and turn off the power, start to clean it after 10-minute cooling down period.
2. Do Not wash the device with water, please gently wipe it with soft cloth containing small amount of neutral detergent and use towel to dry it. Please do not use solvent such as gasoline.
3. After cleaning and maintenance, please make sure that it fully dries before connecting plug or keeping it in storage .
- 4 Please disconnect the unit from power socket and cover it with film bag to prevent if from dust while not use. It is recommended to pack it with original package and keep it in a dry place.

Note: Before cleaning and maintenance, please unplug it and make sure that it does not connect the power.

Guarantee and service policy

This product is guaranteed against faulty materials and manufacture from the date of purchase for 2 year.

In the event of a faulty product firstly contact our customer services team who will guide you through the process.

Do not uninstall or return the product before contacting deXpro customer services, such action may void the warranty.

The standard warranty covers the supply of spare parts or at our sole discretion a replacement product. On-site service costs are strictly exempt from the warranty.

The guarantee specifically excludes:

- Consequential losses, including labour charges and damages to surroundings.
- Failure to maintain and heater according to the instructions in this manual.

INFORMATION FOR CORRECT DISPOSAL OF THE PRODUCT IN
ACCORDANCE WITH THE EUROPEAN DIRECTIVE 2002/96/E.



At the end of its working life this equipment must not be disposed of as household waste. It must be taken to a local authority waste collection centre or to a dealer providing this service. Disposing of electrical and electronic equipment separately enables its components to be recovered and recycled to obtain significant savings in energy and resources. In order to underline the duty to dispose of this equipment separately, the product is marked with a crossed out dustbin.

Tel: 01244 631370 | Email: sales@dexproltd.com