

TECHNICAL DATA  
SMART SYNC CONTROL

WARRANTY  
3 years guarantee

PRODUCT CODE  
T-4Z-REMOTE



@GAPLightingLtd  
GAP Lighting Ltd  
/GAPLightingLtd  
GAP Lighting Ltd



SMART SYNC



PRODUCT DESCRIPTION


RGB(W) 4 Zone Touch Controller with smooth dimming function and dynamic multi colour changing programmes. Incorporating wireless RF 2.4G technology. synchronise multiple products simultaneously or control independently up to 30m range.



GL108-RGBW



 FL-RGBW

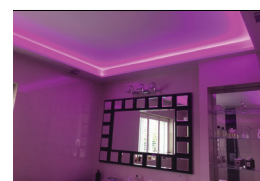

FLEX-RGBW


To see all compatible products go to [www.gaplighting.co.uk](http://www.gaplighting.co.uk)

PRODUCT FEATURES

- RF 2.4G remote control for Smart Sync products
- RGB(W) - colour wheel for manual colour selection
- Brightness control bar | 10 dynamic modes
- Speed control buttons for dynamic modes
- Range up to 30m
- Pair any number of Smart Sync luminaires within 30m range (without obstruction) for synchronised control
- Rechargeable batteries recommended

PRODUCT DATA

Model	T-4Z-REMOTE
Control	4 zone RGBW remote with touch dimming control
Function	Dimming   speed variation   memory   colour saturation   dynamic colour changing modes   single colour settings   master control function
Frequency	2.4GHz high frequency wireless
Remote distance	up to 30 metres
Dimensions	L 120mm   W 52mm   D 20mm
Material	Plastic housing
Battery	2 x AAA
Approvals	CE   ROHS

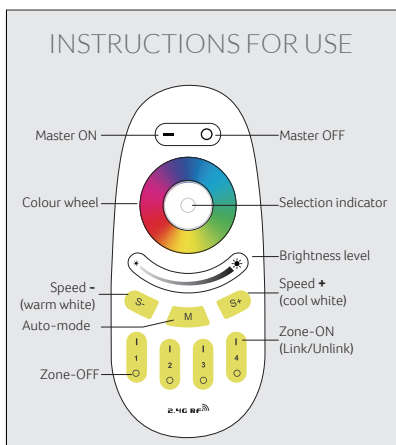 

**Sync:** Switch on via the mains switch. Within 3 seconds, select a Zone-ON button and hold down. Pairing is confirmed when the fitting flashes green. If it does not flash green, try the procedure again.

**Unsync:** Switch on via the mains switch. Within 3 seconds, select the Zone-ON button that relates to the zone you wish to unsync and hold down. Unsyncing is confirmed when the fitting flashes red. If it does not flash red, try the procedure again.

You can go through the different dynamic modes by pressing 'M' and adjust the speed by pressing 'S+/S-'. Hold the Zone-ON button to select the colour white. Select 'S+/S-' to saturate the solid colours when using the colour wheel. If you are using RGB+CCT products press the Zone-ON button to select the colour white then use the 'S+/S-' to change the colour temperature.