

TECHNICAL DATA
SMART SYNC CONTROL

PRODUCT CODE
T-8Z-WALL

WARRANTY
3 years guarantee



@GAPLightingLtd
GAP Lighting Ltd
/GAPLightingLtd
GAP Lighting Ltd

SMART SYNC



PRODUCT DESCRIPTION


RGB+CCT 8 Zone Touch Controller with smooth dimming function and dynamic multi colour changing programmes. For wall mounting anywhere - battery powered. Incorporating wireless RF 2.4G technology. Synchronise multiple products simultaneously or control independently up to 30m range.



SOLAS



iFlood

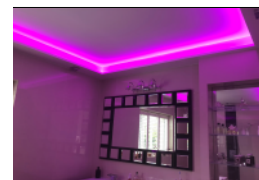

iFlex

To see all compatible products go to www.gaplighting.co.uk

PRODUCT FEATURES

- RF 2.4G remote control for Smart Sync products
- RGB+CCT - colour wheel and slider bar for manual colour selection
- Brightness control bar | 10 dynamic modes
- Speed control buttons for dynamic modes
- Range up to 30m
- Pair any number of Smart Sync luminaires within 30m range (without obstruction) for synchronised control
- Rechargeable batteries recommended
- Back plate for easy mounting / removal

PRODUCT DATA

| | |
|-----------------|---|
| Model | T-8Z-WALL |
| Control | 8 zone RGB+CCT remote with touch dimming control |
| Function | Dimming speed variation memory colour saturation dynamic colour changing modes single colour settings master control function |
| Frequency | 2.4GHz high frequency wireless |
| Remote distance | up to 30 metres |
| Dimensions | L 106mm W 146mm D 20mm |
| Material | Plastic housing |
| Working temp. | -20 to + 60°C |
| Power | 2 x AAA batteries 3.3vDC connector input |
| Approvals | CE ROHS |

INSTRUCTIONS FOR USE



Sync: Select the zone you would like to sync the product to (1-8). Turn the light off via the mains switch. Turn the light on, and within 3 seconds, select the 'ON' button and tap 3 times. The light will flash 3 times which means that syncing has been completed. If the light does not flash then the syncing has failed. Please switch off the light and restart the pairing process again.

Unsync: Select the zone you would like to unsync the product from (1-8). Turn the light off via the mains switch, leave for 10 seconds, and turn on again. Within 3 seconds, select the 'ON' button and tap 5 times. The light will flash 10 times which means that unsyncing has been completed. If the light does not flash then the unsyncing has failed. Please switch off the light and restart the unsyncing process again.