### **Commissioning**

- Clip the product(s) into the brackets.
- Plug in the mains cable to the end of the product.
- · Ensure that the cables are routed to avoid accidents or damage occurring. We recommend that cables are secured to a mounting surface after installation.
- · If a connector end is not being used remember to replace the covering cap. This is important to prevent accidental electric shock.
- This product is colour changing and can be either warm white (3000K), cool white (4000K) and daylight white (5000K).
- Turning the switch ON/OFF quickly (within 3 seconds) to choose your preferred colour, the step is: on(3000K)-off--on(4000K)--off--on(5000K).
- Kelvin memory: First choose the color temperature you want, and keep to light up the lamp ≥10s,and Turn off the lamp and keep switched off ≥30s, the integrated memory function will remember the last colour selected. When you turn on the lamp next time, the color temperature will keep the same as the last time vou choose.
- Re-set function: If you connect several lamps together, and the color temperature of them are different, then you can use re-set function. Quickly turn ON /OFF general power switch for 5 circles(1 circle means on and off) ,all lamps will return to 3000K together.

# Fitting/replacing bulbs

· This system contains non-replaceable parts and cannot be serviced. If damage occurs the part should be scrapped.

### Care & Cleaning

- · Always switch off or disconnect from the mains when cleaning the product.
- · We recommend cleaning with a soft dry cloth. Never use scourers, abrasives or chemical cleaners.
- Do not allow moisture to come into contact with electric parts.

### Recycling advice



Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.

# **Safety information**

Under no circumstances must the connecting lead be modified for use as a power lead. This would make the exposed input socket live. For your safety, always switch off the power supply before cleaning.

### Instruction leaflet

# Sleek CCT LED Undercabinet

75922, 75923, 75924





 $C \in$ 

Thank you for purchasing this light fitting. Please read the instructions carefully before use to ensure safe and satisfactory operation of this product. Please retain these instructions for future reference.

### Warning

This product is Double Insulated and does not require connection to an Earth circuit.

Please read these instructions carefully before commencing any work.

This unit must be fitted by a competent and qualified electrician.

Install in accordance with IEE Wiring regulations and current Building Regulations.

To prevent electrocution switch off at mains supply before installing or maintaining this fitting. Ensure other persons cannot restore the electrical supply. This system contains non-replaceable parts and cannot be serviced. If damage occurs the part should be scrapped.

Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your local authority or retailer for recycling advice.

When wiring to a fused outlet all connections and conductors must be doubled insulated.

# **Specification**

Voltage: 240V ~ 50Hz

Lamp: 75922: 5W LED Module, CCT 3000K/4000K/5000K

75923: 8W LED Module, CCT 3000K/4000K/5000K 75924: 13W LED Module, CCT 3000K/4000K/5000K

IP rating: 20


### Layout

- This product is designed for use under kitchen cupboards, bookshelves, cabinets etc. Suitable for indoor use only. Not suitable for bathrooms.
- The chosen location should allow for the product to be securely mounted and safely connected to the mains supply (240V wall socket or fused outlet socket).
- Avoid locating any cables in positions that would cause a hazard. Position cables away from areas where they may be at risk from being cut, trapped or damaged.
- A plug and cable (ref 75921) are available for purchase separately.

#### Installation

Existing fittings must be completely removed before installation of a new product. Before removing the existing fitting, carefully note the position of each set of wires.

- After deciding on the layout of your choice, determine the positions of the fixing brackets.
- Using the desired brackets, fit the brackets into position using the supplied fixings.
- · Wire as detailed below.
- This product can be linked together by using the supplied connector.

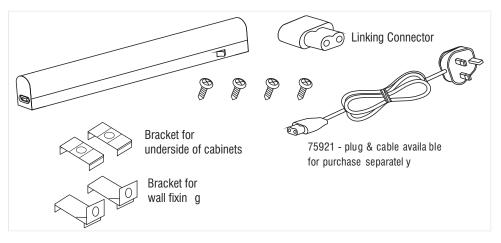

# Wiring

This unit is double insulated and must not be earthed.

- A plug and cable (ref 75921) are available for purchase separately. Once purchased, simply plug-in to an outlet socket. Should the fuse require replacement, it must be replaced with a fuse rated at 3 amp and approved to BS1362.
- If the mains plug is unsuitable for the socket outlet or is removed for any other reason, then the cut off plug should be disposed of safely to prevent the hazard of electric shock.
- There is a danger of electric shock if the cut off plug is inserted into any 13 amp socket outlet.
- To directly wire the power lead to a fused outlet socket, remove the plug and connect the Brown wire to the terminal marked L. The Blue wire must be connected to the terminal marked N. Use a 3 Amp Fuse approved to BS1362.

 The wires in the mains lead on this appliance are coloured in accordance with the following code:

Blue - Neutral

Brown - Live

• Use a 3 Amp Fuse approved to BS1362.

