



Technical Data

Telephone And Data Outlets

Brief product description:

The subtle design will blend with any décor - suitable for domestic or commercial installations.

Features:

- Stylish modern profile
- Easy installation
- Covers to conceal fixing screws

Product Images



8BTM/1, 8BTS/1
8BTM1/1, 8BTS1/1
8RJ11/1



8BTM/2, 8BTS/2
8BTM1/2, 8BTS1/2
8RJ11/2



8RJ45/1




8RJ45/2

Technical Specifications



Standard(s)	BS 6312-2 where applicable
Socket Type	BT (8BTM/1, 8BTM/2, 8BTS/1, 8BTS/2 products) BT (8BTM1/1, 8BTM1/2, 8BTS1/1, 8BTS1/2 products) RJ11 (8RJ11/1, 8RJ11/2 products) RJ45 (8RJ45/1, 8RJ45/2 products)
Terminal Type	Screwed (8BTM/1, 8BTM/2, 8BTS/1, 8BTS/2, 8RJ11/1, 8RJ11/2 products) IDC (8BTM1/1, 8BTM1/2, 8BTS1/1, 8BTS1/2, 8RJ45/1, 8RJ45/2 products)
RoHS Directive	No
WEEE Directive	No
Mounting Box Depth(Min)	25mm (8BTM/1, 8BTM/2, 8BTS/1, 8BTS/2 products) 25mm (8BTM1/1, 8BTM1/2, 8BTS1/1, 8BTS1/2 products) 35mm (8RJ11/1, 8RJ11/2, 8RJ45/1, 8RJ45/2 products)
Fixing Centres	60.3mm
Size	86mm x 86mm x 22mm (8BTM/1, 8BTM/2, 8BTS/1, 8BTS/2 products) 86mm x 86mm x 22mm (8BTM1/1, 8BTM1/2, 8BTS1/1, 8BTS1/2 products) 86mm x 86mm x 30mm (8RJ11/1, 8RJ11/2 products) 86mm x 86mm x 36mm (8RJ45/1, 8RJ45/2 products)

Telephone And Data Outlets




Line Diagrams

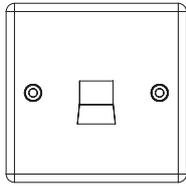




8BTM/1, 8BTS/1
8BTM1/1, 8BTS1/1

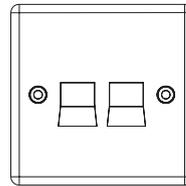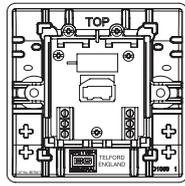




8BTM/2, 8BTS/2
8BTM1/2, 8BTS1/2

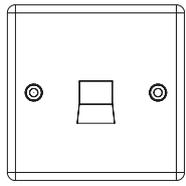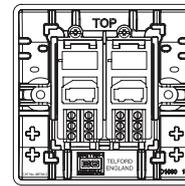




8RJ11/1

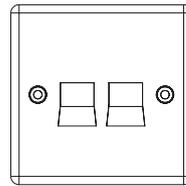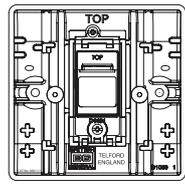



8RJ11/2

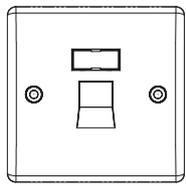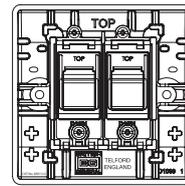

8RJ45/1

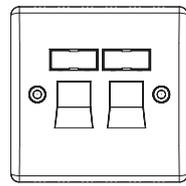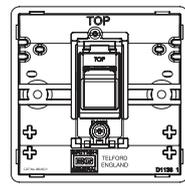

8RJ45/2

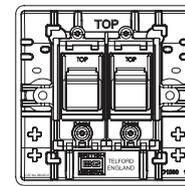

Packaging Information

Cat No.	Description	Packaging Type			Pack Quantity			Barcode		
		Product	Inner Box	Outer Box	Each	Inner Box	Outer Box	Individual	Inner Box	Outer Box
8BTM/1	1G, Tel Socket Master	Nexus PolyBag	Nexus Inner	Nexus Outer	1	10	100	5050765002295		
8BTM/2	2G, Tel Socket Master	Nexus PolyBag	Nexus Inner	Nexus Outer	1	10	100	5050765002325		
8BTS/1	1G, Tel Socket Slave	Nexus PolyBag	Nexus Inner	Nexus Outer	1	10	100	5050765002417		
8BTS/2	2G, Tel Socket Slave	Nexus PolyBag	Nexus Inner	Nexus Outer	1	10	100	5050765002448		
8BTM1/1	1G, Tel Socket Master	Nexus PolyBag	Nexus Inner	Nexus Outer	1	10	100	5050765002233		
8BTM1/2	2G, Tel Socket Maste	Nexus PolyBag	Nexus Inner	Nexus Outer	1	10	100	5050765002264		
8BTS1/1	1G, Tel Socket Slave	Nexus PolyBag	Nexus Inner	Nexus Outer	1	10	100	5050765002356		
8BTS1/2	2G, Tel Socket Slave	Nexus PolyBag	Nexus Inner	Nexus Outer	1	10	100	5050765002387		
8RJ11/1	1G, RJ11 Tel Socket	Nexus PolyBag	Nexus Inner	Nexus Outer	1	10	100	5050765002479		
8RJ11/2	2G, RJ11 Tel Socket	Nexus PolyBag	Nexus Inner	Nexus Outer	1	10	100	5050765002509		
8RJ45/1	1G, RJ45 Tel Socket	Nexus PolyBag	Nexus Inner	Nexus Outer	1	10	100	5050765002530		
8RJ45/2	2G, RJ45 Tel Socket	Nexus PolyBag	Nexus Inner	Nexus Outer	1	10	100	5050765002561		

Weights & Dimensions

Cat No.	Description	Dimension (W x L x H) cm			Weight (g)			CMB (m ³)
		Product	Inner Box	Outer Box	Each	Inner Box	Outer Box	Outer Box
8BTM/1	1G, Tel Socket Master	9.2 x 9.2	12.5 x 18 x 9.2	26 x 49.5 x 19	72	714	8000	0.024
8BTM/2	2G, Tel Socket Master							
8BTS/1	1G, Tel Socket Slave	9.2 x 9.2	12.5 x 18 x 9.2	26 x 49.5 x 19	68	714	7600	0.024
8BTS/2	2G, Tel Socket Slave	9.2 x 9.2	12.5 x 18 x 9.2	26 x 49.5 x 19		754	8000	0.024
8BTM1/1	1G, Tel Socket Master	9.2 x 9.2	12.5 x 18 x 9.2	26 x 49.5 x 19		854	9000	0.024
8BTM1/2	2G, Tel Socket Maste	9.2 x 9.2	12.5 x 18 x 9.2	26 x 49.5 x 19		914	9600	0.024
8BTS1/1	1G, Tel Socket Slave	9.2 x 9.2	12.5 x 18 x 9.2	26 x 49.5 x 19	81	784	8300	0.024
8BTS1/2	2G, Tel Socket Slave	9.2 x 9.2	18 x 22.5 x 9.2	26 x 49.5 x 19		854	9000	0.024
8RJ11/1	1G, RJ11 Tel Socket	9.2 x 9.2 x 3.65	16.8 x 18 x 9.2	35 x 49.5 x 19	70	758	8200	0.032
8RJ11/2	2G, RJ11 Tel Socket	9.2 x 9.2 x 3.65	16.8 x 18 x 9.2	35 x 49.5 x 19		878	9400	0.032
8RJ45/1	1G, RJ45 Tel Socket	9.2 x 9.2 x 4.1	19 x 18 x 9.2	39 x 49.5 x 19	72.5	825	9000	0.032
8RJ45/2	2G, RJ45 Tel Socket	9.2 x 9.2 x 4.1	19 x 18 x 9.2	39 x 49.5 x 19		825	9000	0.032

Telephone And Data Outlets

Installation Information

Safety Warning

Before use please read and carefully use in accordance with these safety wiring instructions.

To ensure a satisfactory operation these products should be installed by a competent person. If in doubt seek advice from a qualified engineer.

These products should not be installed into the same enclosure containing mains exceeding 50V. Avoid running the telecom cable within 50mm of mains electrical cable.

Socket Types

1. Master – Intended for use as the first socket outlet on a direct exchange line as the primary Network Terminal Point

The socket is surge protected as per the OFTEL requirements as defined in BS6312.

2. Secondary/Slave – Used in installations as extension sockets when connected on the same line in parallel with a master socket.

Both Master and Secondary/Slave sockets available with screw or IDC termination.

Technical Helpline: 0845 194 7584

If in doubt consult a competent electrician.

General Installation Instructions

1. Select the appropriate size of mounting box (metal or plastic) for either flush or surface mounting. Remove the fixing screws and screw covers from the rear of the product.
2. Ensure that the mounting box is securely fixed and free of any plaster lumps and projecting screws in the central areas of the box.
3. Route the cable through the most suitable entry point of the mounting box. If a metal box is used, ensure that a protective cable grommet is fitted. All wiring must use single core telecoms cable.
4. Carefully arrange the cable(s) so as to lie along the edges of the product or box, keeping the central area clear. The cable should be cut to a sufficient length for connection.
5. Carefully remove 50mm of the telephone cable outer sheath to expose the inner insulated conductors.
6. To assist with the correct installation of this product please consult the appropriate wiring diagram. Terminals 1 and 6 are frequently unused, 2 pair (4 wires) cable may be used in these installations.
7. Carefully position the connected unit into the wall box, ensuring that the cable does not have any sharp bends or is not trapped between the plate and the wall. Fully secure using the fixing screws provided, being careful not to overtighten the screws.
8. Push in the screw covers to conceal the fixing screws.

IDC Type Connection


Using a suitable IDC push each lead into the appropriate IDC terminal according to the BT Wiring Scheme below. Trim off any excess inner conductors protruding from the IDC terminals.

Screw Type Connection

The ends of the individual conductors should have the insulation removed by approx. 8mm. Connect each wire as per the BT Wiring Scheme below. Ensure that only the bare end of the wire enters the terminal, and that no bare wires are visible. Always tighten the terminal screws securely.

1 Gang Telephone Socket

For both Master and Secondary/Slave sockets connect the wires as shown in the diagram below. (Master, screw type socket shown)

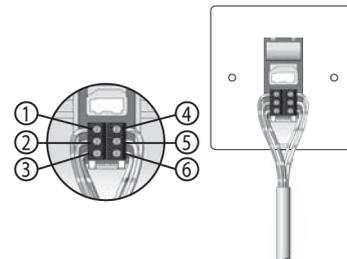

BT Wiring Scheme	
Terminal / Line	Colour
1	Green with White rings
2	Blue with White rings
3	Orange with White rings
4	White with Orange rings
5	White with Blue rings
6	White with Green rings

***Note** - An existing installation may use a different wiring colour code system. It is essential that the new product is wired up in the same way as the old one.


The simplest way is either to label each conductor with the location of the terminal to which it connects as you release it or to transfer one conductor at a time to the corresponding terminal on the new product.

Installation Instructions For Adding Secondary Extension Outlets

Although as many secondary/slave sockets can be used as desired, a normal limit of 4 RENS can be used for 1 line. One telephone normally equating to 1 REN. This REN value can usually be found on the device.

Additional outlets should be wired in parallel with the existing installation, i.e Terminal 1 on master socket to terminal 1 on slave socket, terminal 2 to Terminal 2, etc. Please refer to the diagram below for guidance.


Extension sockets may be connected to the master socket by a maximum of 50m of cable. The total length of wiring that may be used including all branches should not exceed 100m.

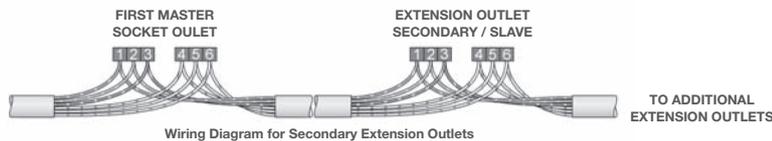

2 Gang Telephone Socket - Screw Terminal

For both Master and Secondary/Slave sockets connect the cables as shown in the diagram below. Socket provides two separate outlets from two separate inputs.

(Master screw type socket shown)

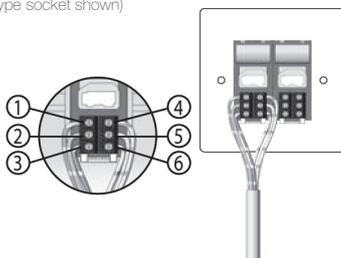

2 Gang Double Telephone Socket

To create a double socket – two outputs from one input, a connection is required to be made between similar terminals. Connect your input to one set of terminals.

Prepare a suitable length of telephone wire, and connect between like terminals – 1 to 1, 2 to 2 etc. (Screw type socket shown)

